

# Kenwood TM-D710G



## Basic operating instructions

By George James KD7XP

**The following pages describe  
the very basic operations of the  
Kenwood TM-D710G Dual Band radios**

**Located at**  
**all the hospitals,**  
**the OEM radio room,**  
**the MCU**  
**and the MCT.**

**The first thing we want to do is**

**Turn the radio on**

## Power on and off



**Now for some basic control  
descriptions**

**Concerning the four controls at the  
lower right of the control head**



**These controls are used for several things**

**The left set of these controls control the  
left side of the display  
(or radio)**



**This set of controls control  
this side of the display**



**The right set of these controls control the  
right side of the display  
(or radio)**

This set of controls control  
this side of the display



**Push the left center (smaller) knob in to  
operate on the left side of the display  
(or radio)**

# Left side operational



**Notice the PTT indicating that this side of the radio is in push to talk mode.**

## Left side of radio in PTT mod



**Push the right center (smaller) knob in to  
operate on the right side of the display  
(or radio)**



## Right side operational



**Again.**

**Notice the PTT indicating that this side of the radio is in push to talk mode.**

**Notice PTT on active side of display**



**Note: If a comment has been made that you are on the wrong side of the radio.**



**Adjust these controls as needed**

**These same controls also control the volume on the respective sides of the display (or radio)**



Left volume

Right volume

**The squelch controls are  
the two outer knobs  
behind the volume controls**





Squelch controls

**As was the case with the volume controls.**

**The squelch controls control the squelch on the respective sides of the display (or radio)**



Left squelch

Right squelch

**To select a channel or frequency.**

**First select which side of the radio you  
want to operate on.**



**Push either the left or right center (smaller) knob to select which side of the radio to operate on.**

**Make sure you are in memory mode on  
the side of the radio that you have  
selected**

## Select memory operation



**Then select the channel**





**Turn this knob to  
select channel**

**The Kenwood TM-D710G  
displays several things about the  
channel.**

**First, Let's look at the channel number.**

The channel numbers are located here and here



**You will also see the channel names.**

## The channel names



**As well as the frequency**

## Frequencies



**Now we look at  
transmitter power output.**



The output power levels available are  
H= 50 watts, M= 10 watts, L= 5 watts



**They are indicated by these small letters**



**and changed by pressing the "LOW" button**

**Now for the only area of a somewhat technical nature.**

**It is possible that the wording at the bottom of the display may be different indicating a different function for the keys below the display.**

**Take a look at the function lines at the bottom of the display on the next two pictures.**



**These are different**



Than these

**If this should occur,  
pressing the “F” button will change the  
wording and corresponding function.**





**Pressing this  
"F" button**

**Changes the wording  
and function of these  
buttons**

